

PC TERM Palm (PerfectClima) – Assembly Instructions

1. Prepare pressure pipelines for water (pic.1)



2. Put the pipelines through the down casing tube and connect them to the divider on the base (pic.2, pic.3, pic.4, pic.5).



3. Put on a median ring (pic.6, pic.7)




4. Put on the upper casing tube (pic.8a, pic.8b)



5. Put an upper ring (pic.9) and a flat star-piece and pull the pressure pipelines through longitudinal openings of the flat star-piece (pic.10)



6. Put together the rest of RTT elements
7. Connect the pressure pipelines to the heaters (pic.11)

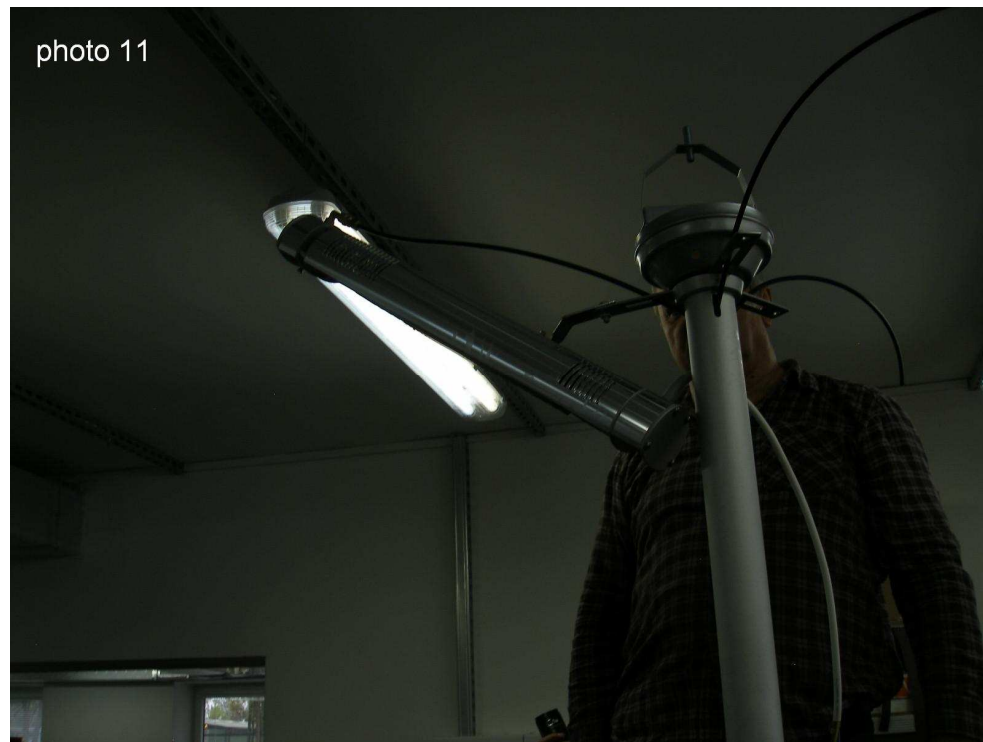

8. Connect a pressure aggregate to water

Note: After connection to water, the whole system will obtain leakproofness only when filled with water and reaching an appropriate pressure.